

Kod części: 1322553320; artykuł pasuje do poniższych urządzeń

	Numer produktu	Wersja (MLC)	data produkcji	model	marka
1	914520800	01	20090515	P68	ZOPPAS
2	914520800	02	20100304	P68	ZOPPAS
3	914520800	03	20100517	P68	ZOPPAS
4	914520802	01	20090515	P611	ZOPPAS
5	914520802	02	20100304	P611	ZOPPAS
6	914520802	03	20100601	P611	ZOPPAS
7	914520804	01	20090612	ZF206	ZOPPAS
8	914520804	02	20100304	ZF206	ZOPPAS
9	914520804	03	20100601	ZF206	ZOPPAS
10	914520806	00	20090417	RWP10170W	REX-ELECTROLUX
11	914520806	01	20090515	RWP10170W	REX-ELECTROLUX
12	914520806	02	20100304	RWP1017W	REX-ELECTROLUX
13	914520806	03	20100526	RWP1017W	REX-ELECTROLUX
14	914520807	01	20090515	RWP8170W	REX-ELECTROLUX
15	914520807	02	20100304	RWP8170W	REX-ELECTROLUX
16	914520807	03	20100601	RWP8170W	REX-ELECTROLUX
17	914520808	01	20090515	RWP6170W	REX-ELECTROLUX
18	914520808	02	20100303	RWP6170W	REX-ELECTROLUX
19	914520808	03	20100601	RWP6170W	REX-ELECTROLUX
20	914520809	01	20090515	RWP8075W	REX-ELECTROLUX
21	914520809	02	20100309	RWP8075W	REX-ELECTROLUX
22	914520809	03	20100526	RWP8075W	REX-ELECTROLUX
23	914520810	01	20090515	RWP10075W	REX-ELECTROLUX
24	914520810	02	20100316	RWP10075W	REX-ELECTROLUX
25	914520810	03	20100601	RWP10075W	REX-ELECTROLUX
26	914520811	01	20090515	RWP12075W	REX-ELECTROLUX
27	914520811	02	20100412	RWP12075W	REX-ELECTROLUX
28	914520811	03	20100527	RWP12075W	REX-ELECTROLUX
29	914520812	00	20090904	EWP10075W	ELECTROLUX
30	914520812	01	20100324	EWP10075W	ELECTROLUX
31	914520812	03	20110216	EWP10075W	ELECTROLUX

Kod części: 1322553320; artykuł pasuje do poniższych urządzeń

32	914520812	04	20110414	EWP10075W	ELECTROLUX
33	914520812	05	20130408	EWP10075W	ELECTROLUX
34	914520816	00	20090612	ZF2461	ZOPPAS
35	914520816	02	20100610	ZF2461	ZOPPAS
36	914520900	01	20090522	RWP12470W	REX-ELECTROLUX
37	914520900	02	20100329	RWP12470W	REX-ELECTROLUX
38	914520900	03	20100611	RWP12470W	REX-ELECTROLUX
39	914520902	00	20100701	JLWM1404	JOHN LEWIS
40	914520902	01	20110111	JLWM1404	JOHN LEWIS
41	914520902	02	20110413	JLWM1404	JOHN LEWIS
42	914523400	00	20090320	ZWN5105	ZANUSSI
43	914523402	00	20090424	ZWN6104	ZANUSSI
44	914523402	01	20100128	ZWN6104	ZANUSSI
45	914523403	00	20090508	EFW10190W	ELECTROLUX
46	914523403	01	20100218	EFW10190W	ELECTROLUX
47	914523404	00	20090501	EFW10190W	ELECTROLUX
48	914523405	00	20090501	RWF10190W	REX-ELECTROLUX
49	914523405	01	20100325	RWF10190W	REX-ELECTROLUX
50	914523408	00	20090828	RWF10095W	REX-ELECTROLUX
51	914523408	01	20100420	RWF10095W	REX-ELECTROLUX
52	914523409	00	20090501	P810	ZOPPAS
53	914523409	01	20100128	P810	ZOPPAS
54	914523410	00	20110517	IFL1280D	CURTISS
55	914523411	00	20100819	RWF108119W	REX-ELECTROLUX
56	914523411	01	20110414	RWF108119W	REX-ELECTROLUX
57	914523412	00	20100422	EFW108210W	ELECTROLUX
58	914523412	01	20110418	EFW108210W	ELECTROLUX
59	914523414	00	20101209	PWN81061	ZOPPAS
60	914523414	01	20110503	PWN81061	ZOPPAS
61	914523416	00	20100819	RWF108210W	REX-ELECTROLUX
62	914523416	01	20110729	RWF108210W	REX-ELECTROLUX
63	914523417	00	20100311	ZWN6104	ZANUSSI

Kod części: 1322553320; artykuł pasuje do poniższych urządzeń

64	914523417	01	20110517	ZWN6104	ZANUSSI
65	914523419	00	20100513	EWF108211W	ELECTROLUX
66	914523419	01	20110527	EWF108211W	ELECTROLUX
67	914523420	00	20110331	RWF128212W	REX-ELECTROLUX
68	914523500	01	20090131	AWF12491W	ARTHURMARTINELUX
69	914523500	02	20100212	AWF12491W	ARTHURMARTINELUX
70	914523501	00	20090306	EWF12491W	ELECTROLUX
71	914523507	00	20090307	ZWN3125	ZANUSSI
72	914523507	01	20100310	ZWN3125	ZANUSSI
73	914523509	00	20090207	EWF12491W	ELECTROLUX
74	914523509	01	20100209	EWF12491W	ELECTROLUX
75	914523510	00	20090828	RWF10490W	REX-ELECTROLUX
76	914523510	01	20100701	RWF10490W	REX-ELECTROLUX
77	914523511	00	20100311	EWF128420W	ELECTROLUX
78	914523515	00	20100716	RWF128420W	REX-ELECTROLUX
79	914523516	00	20110429	EWF128410W	ELECTROLUX
80	914523518	00	20100503	EWF148420W	ELECTROLUX
81	914523518	01	20110429	EWF148420W	ELECTROLUX
82	914523520	00	20101209	PWN81070	ZOPPAS
83	914523520	01	20110418	PWN81070	ZOPPAS
84	914523522	00	20110505	EWF128410W	ELECTROLUX
85	914523523	00	20091119	ZWN6105	ZANUSSI
86	914523523	01	20100416	ZWN6105	ZANUSSI
87	914523523	02	20110503	ZWN6105	ZANUSSI
88	914523524	00	20100311	ZWN7125	ZANUSSI
89	914523524	01	20111004	ZWN7125	ZANUSSI
90	914523528	00	20100422	EWF128420W	ELECTROLUX
91	914523529	00	20100513	EWF148421W	ELECTROLUX
92	914523529	01	20110630	EWF148421W	ELECTROLUX
93	914523534	00	20110620	EWF128410W	ELECTROLUX
94	914523600	02	20090626	ZWF14791W	ZANUSSI
95	914523600	03	20100203	ZWF14791W	ZANUSSI

Kod części: 1322553320; artykuł pasuje do poniższych urządzeń

96	914523600	04	20110110	ZWF14791W	ZANUSSI
97	914523600	05	20110418	ZWF14791W	ZANUSSI
98	914523606	02	20090206	P810D	ZOPPAS
99	914523608	03	20090424	ZWN6105	ZANUSSI
100	914523609	01	20081108	ZWN6125	ZANUSSI